




TO PUT CONTINUOUS TRACE WIRE UNDER BOLT, FIRST LOOSEN BOLT, THEN STRIP 3" MIN., WRAP ONCE AROUND BOLT, 1 TWIST, 2 WRAPS. "DO NOT CUT WIRE" TIGHTEN BOLT AFTER WRAPPING TRACE WIRE AROUND THE BOLT.

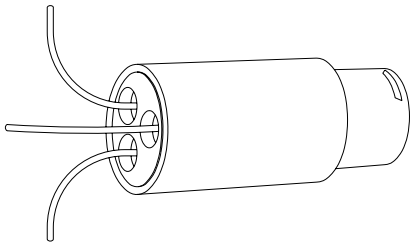

DETAIL OF THREE (3) WIRE SPLICE

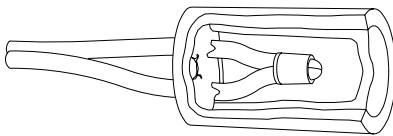

CUTAWAY DETAIL OF A TWO (2) WIRE SPLICE

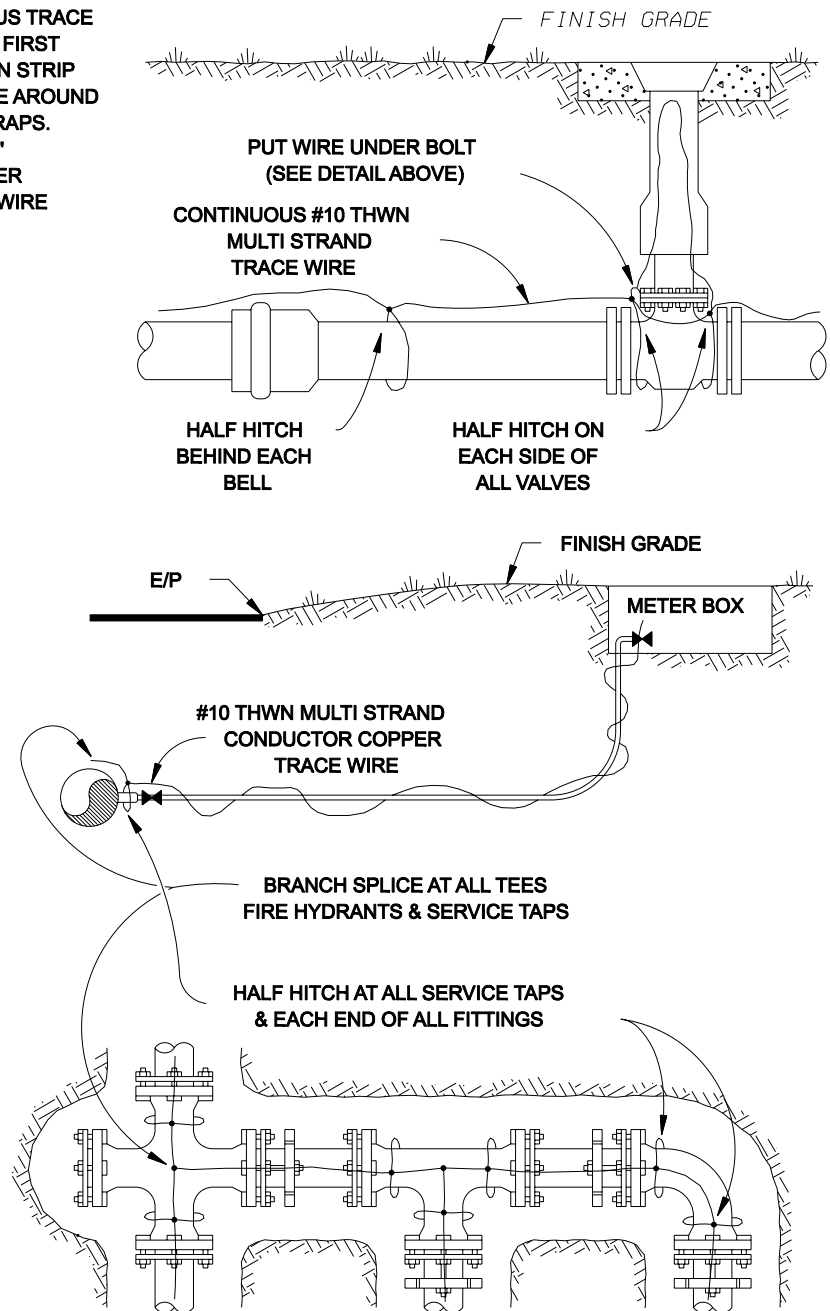

NOTES:

1. TRACE WIRE IS REQUIRED ON ALL PIPE AS NOTED BY S.L.C.U. AND THE ENGINEER, AND SHOWN IN STANDARD DETAILS.
2. INCLUDE ALL COST OF MATERIAL & LABOR IN PRICE OF PIPE.
3. CONTRACTOR IS RESPONSIBLE FOR CONTINUITY OF ALL TRACE WIRE.

